

EdgeAntenna 5G Quick Start Guide

OVERVIEW



Connecting to the EdgeAntenna

EdgeAntenna requires 25W (PoE+ 802.3at)

1. If using the Included PoE Injector, connect to an available AC power source; otherwise, ensure proper PoE power is available
2. Use an ethernet cable to connect a client computer or device to the LAN port of the PoE Injector
3. Connect the ethernet cable from the EdgeAntenna to the PoE/Data port of the PoE Injector

CONFIGURATION

Connect to the Edge Web Portal for Configuration and Management

1. DHCP is enabled by default. An address should be assigned to the client computer or device from the 192.168.231.0/24 network space, with the Default Gateway of 192.168.231.1 and DNS of 8.8.8.8
2. To connect and control the EdgeAntenna, direct the web browser of the client to the URL: <http://192.168.231.1>
3. When the portal login appears, use the K4 provided username/password. New systems ship with the temporary login of *edge / edge*
4. Access the device configuration menus with the "3 dots" icon in the upper right
 - a. **Configuration Wizard:** VLAN and physical port configuration
 - b. **Internet (WAN) Status:** WAN link status summary
 - c. **Performance Charts:** Historical connectivity data
 - d. **Usage Status:** Data summary
 - e. **Cellular Controller:** Modem and SIM configuration
 - f. **Shell Interface:** command line functionality

