

EdgeServer

Quick Start Guide

[Click here to open Product Registration Guide](#)

EdgeServer Quick Start Guide

Open EdgeServer Box. Primary components included.

1. EdgeServer appliance
2. 1x DC Power Supply
3. VESA Mounting kit.



Figure 1 EdgeServer Back Panel (left) and Front Panel (right)

Steps to bring system online and connect to Edge Web Portal

1. Connect DC Power to EdgeServer, use a UPS for vessel deployments.
2. System will power up and be online in a few minutes.

Connect to Edge Web Portal for Configuration and Management

1. (Option 1) Connect Laptop Ethernet interface to EdgeServer LAN Ethernet Port [Left-most port], configure laptop interface to "obtain IP address automatically" (DHCP).
 - a) Laptop IP address should be assigned from the 192.168.230.0/24 network space.
2. (Option 2) Connect Laptop via USB Ethernet Dongle to EdgeServer USB FP/MGMT Port [Top-Right USB port], configure laptop interface to "obtain IP address automatically" (DHCP).
 - a) Laptop IP address should be assigned within the 10.255.240.0/28

network space.

3. Open Web Browser on Laptop; enter in the url: <http://10.0.254.1> (or the GW IP address) and return.
4. Portal login appears. Use the provided username/password, or with a new system use the temporary login credentials: edge/edge.
5. Portal Dashboard will appear on the "Configuration Wizard" home page. Click on the Menu "3 dots" Icon Upper Right.
 - a) Internet link status - "Internet (WAN) Status"
 - b) Internet Performance - "Performance Charts"
 - c) Device Usage – "Usage Status"
 - d) Update Configuration - "Configuration Wizard"

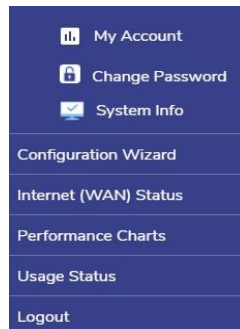


Figure 2 EdgeServer Menu

Please Note

1. DC Power to EdgeServer must be stable, UPS required for on vessel operation. Blinking on/off power will move the device to a safe power mode (off), which requires a 5s disconnect of power and reconnection.
2. User Manuals are available online at:
<https://k4mobilityengineering.atlassian.net/wiki/spaces/KMPD/overview>